


Eclipse RatioMatic

Burners

Model RM0700

Version 5

Parameter	Specification	
Blower Type	Chamber Pressure "w.c. (mbar)	60 Hz
Maximum Input, Btu/h (kW)¹ Contact factory for chamber pressures outside the given range, or varying chamber pressure conditions.	-5.0 (-12.4)	7,640,000 (2240)
	-2.0 (-5.0)	7,260,000 (2130)
	0.0 (0.0)	7,000,000 (2050)
	2.0 (5.0)	6,720,000 (1970)
	5.0 (12.4)	6,290,000 (1840)
Minimum Input On-Ratio, Btu/h (kW) <i>Lower inputs may be achieved. Contact factory.</i>	80,000 (23)	
Main Gas Inlet Pressure, psig (mbar)² <i>Fuel pressure at ratio regulator inlet</i>	Natural Gas	1.0 to 2.5 (70 to 175)
	Propane	1.0 to 2.0 (70 to 140)
High Fire Flame Length, inches (mm) <i>Measured from the outlet end of the combustor</i>	Natural Gas	75 (1900)
	Propane	88 (2200)
Maximum Chamber Temperature, °F (°C)	Alloy Tube	1500 (815)
	Block & Holder	1900 (1038)
Flame Detection	Alloy Tube	Flamerod or UV Scanner
	Block & Holder	UV scanner only
Fuel <i>For any other mixed gas, contact Eclipse, Inc.</i>	Natural Gas, Propane, Butane ³	
Blower Motor Power, Hp	7.5	
Weight, lbs (kg)⁴	Alloy Tube	410 (186)
	Refractory	556 (252)
Approvals		

¹ Maximum inputs for packaged blower versions are given for the standard combustion air blower without an inlet air filter.



² For proper performance, this pressure must be kept constant across the burner operating range.

³ See Design Guide 110 for more information about typical fuel composition and properties.

⁴ All weights are approximate.

- All information is based on laboratory testing. Different chamber conditions will affect the data.
- All inputs based upon gross calorific values and standard conditions; 1 atmosphere, 70°F (21°C).
- Eclipse reserves the right to change the construction and/or configuration of our products at any time without being obliged to adjust earlier supplies accordingly.

Performance Graphs

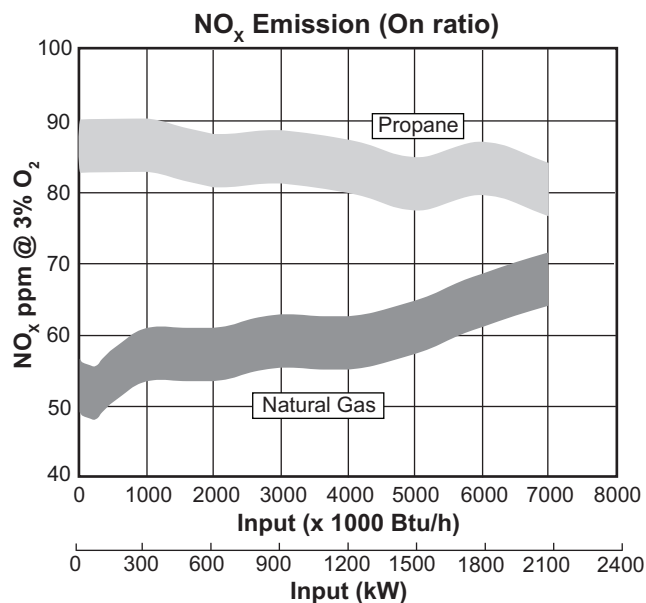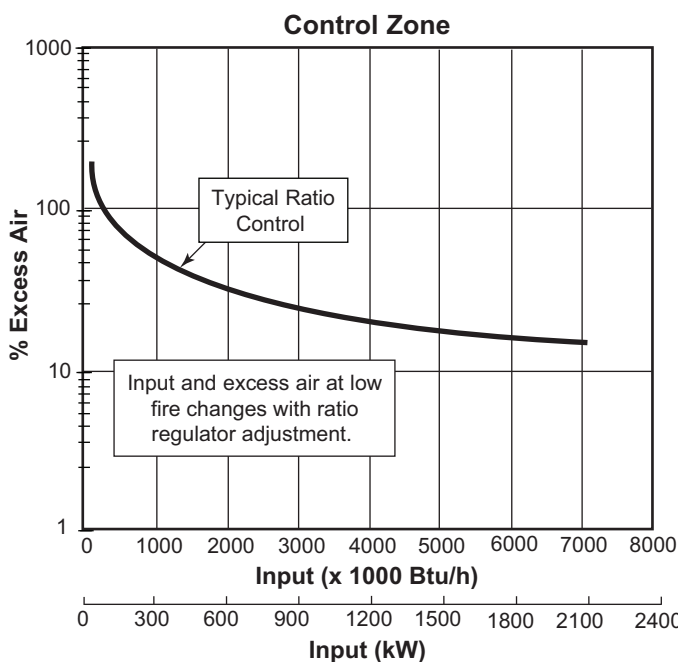



NO_x Emission data is given for:

- Ambient combustion air ~70°F (21°C)
- Less than 1000°F (540°C) firing chamber
- Minimal process air velocity
- Low fire input adjusted to 80,000 Btu/h (23 kW)
- ppm volume, dry @ 3% O₂
- Neutral chamber pressure

Emissions from the burner are influenced by:



- Chamber conditions
- Fuel type
- Firing rate
- Ratio regulator adjustment
- Combustion air temperature

CO emission is largely influenced by chamber conditions. Contact your local Eclipse representative for an estimate of CO emission on your application.

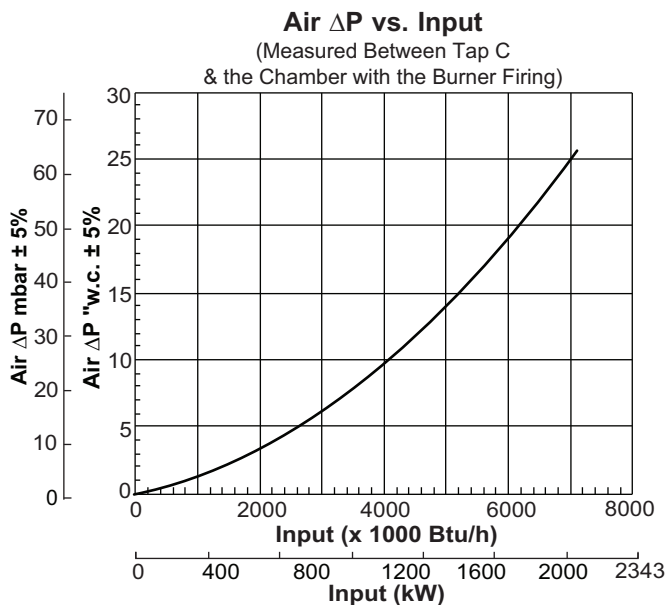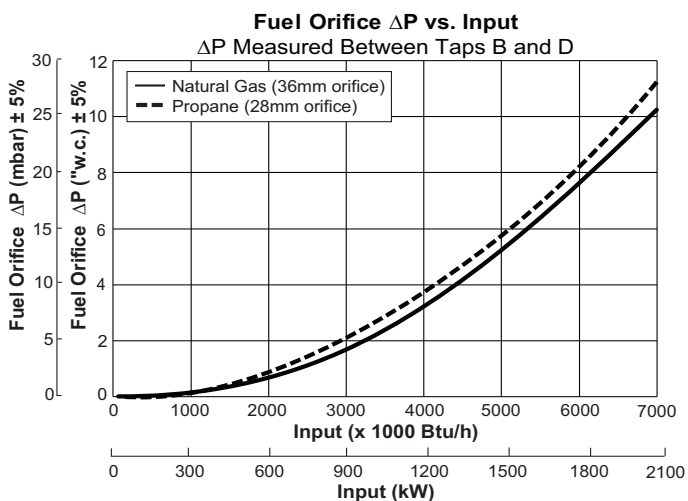


Dimensions and Specifications



Dimensions in mm (in)

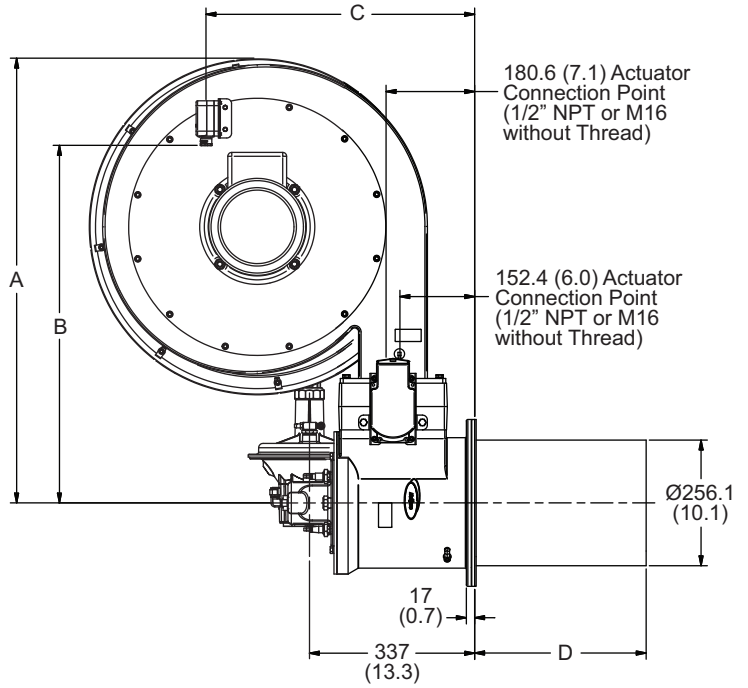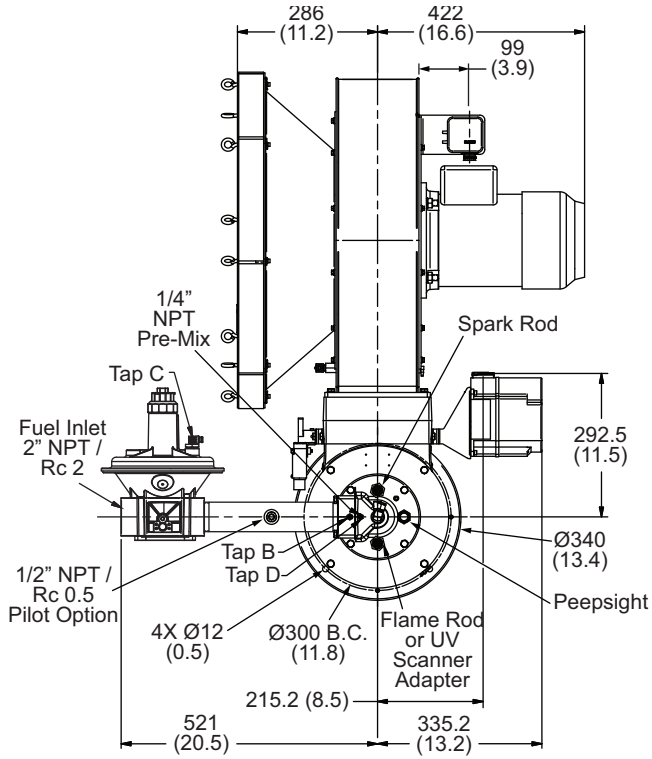


Blower Size	A	B	C
50 Hz	907 (35.7)	713 (28.1)	492 (19.4)
60 Hz	857 (33.7)	626 (24.7)	459 (18.1)

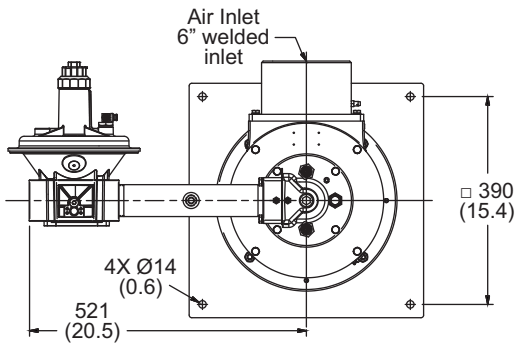

Square Block and Holder

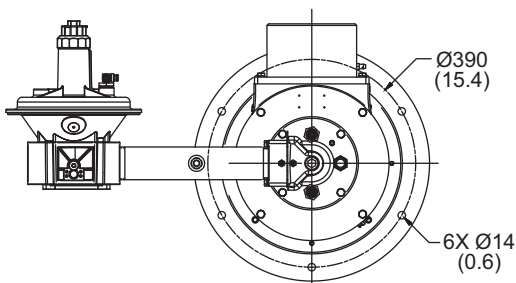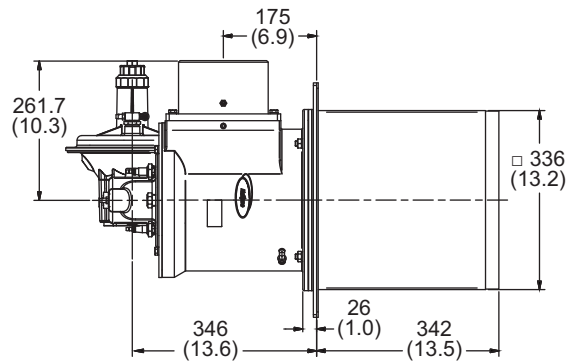


Round Block and Holder

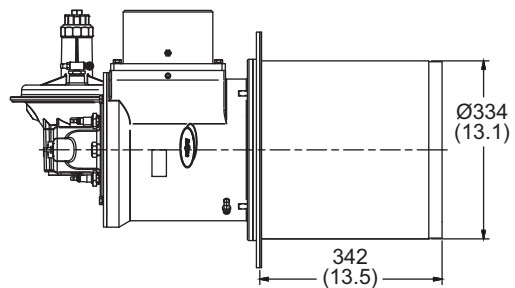


Combustor Options

Alloy Tube

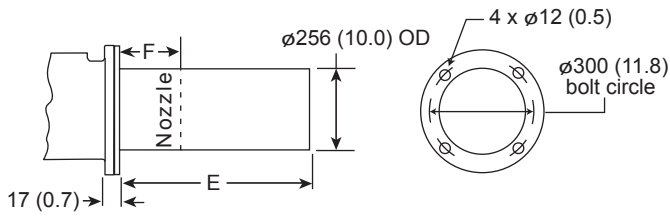


E	F
350 (13.8)	153 (6.0)
426 (16.8)	229 (9.0)


Square Block & Holder

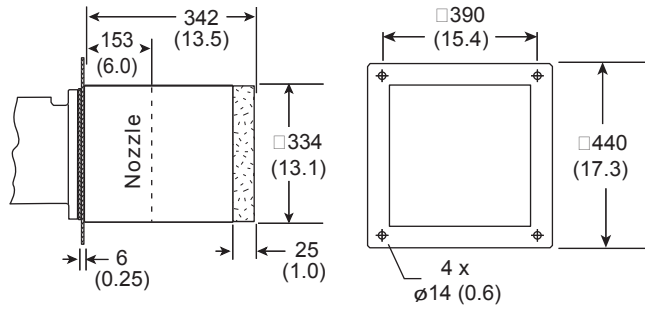

Round Block & Holder


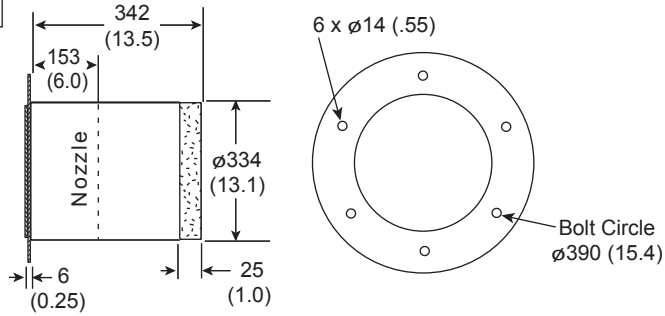


Burner Configurations

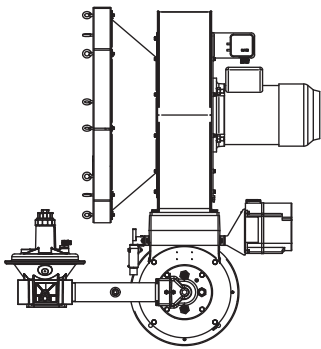

Upright Left Hand Piping

Inverted Left Hand Piping

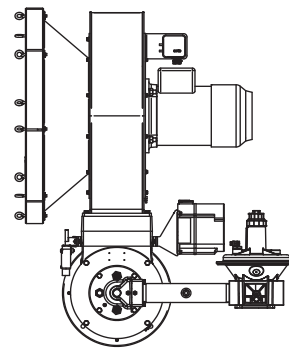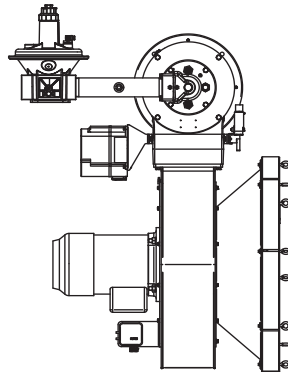

Upright Right Hand Piping

Inverted Right Hand Piping

